instrumentos de medida



PROGRAMMABLE DC ELECTRONIC LOAD MODEL 63200A SERIES

The 63200A series high power DC electronic loads are designed for testing a wide range of power conversion products including AC/DC and server power supplies, DC/DC converters, EV batteries, automotive charging stations, and other power electronics components. These units can be synchronously paralleled up to 240kW and dynamically synchronized for generating complex multi-channel transient profiles. The 300% peak overpower capability provides extra headroom for fault condition simulations in automotive batteries, fuel cells, and more.

The 63200A series have three operating voltage choices, 150V, 600V & 1,200V, with models covering power levels from 4kW to 24kW and up to 2,000A in a single unit.

The DC loads have unique user defined waveform (UDW) capability and external analog modulating input for simulating real-world, custom waveforms. Another distinct feature is the dynamic auto-frequency sweep function, which enables detecting a UUTs worst case output deviation across a wide range of current frequencies. In addition, a 255-set of data storage function has been built in for recall of the stored settings at any time. For automated testing, the save and recall functions can save a great deal of time.

As each model of the 63200A series has 3 power ranges, they can precisely measure the voltage and current in real time. Since short circuit testing is one of the essential power testing items, the 63200A series provides short circuit simulation to effectively solve the application demands for power and automated testing.

With the vacuum florescent display (VFD) and rotary knob, the 63200A series loads offer versatile front panel operation. Users are able to control the 63200A family remotely via standard USB or optional Ethernet and GPIB interfaces.

The embedded PWM fan speed control reduces noise caused by fans. The 63200A series also have overcurrent, overpower, and over temperature protections as well as over voltage and polarity reverse alarms to enhance product reliability. These DC loads are reliable products for engineering testing and automated test system's integration.



Programmable DC Electronic Load

MODEL 63200A SERIES

KEY FEATURES

- Rated power : 4kW, 5kW, 6kW, 24kW, max. 240kW (parallel)
- Voltage range: 150V, 600V, 1200V
- Current range: 2,000A max. per unit
- CC, CR, CV & CP operation modes
- CR+CC, CR+CV, CC+CV complex modes
- Up to 10 units master/slave parallel control
- Dynamic synchronous control in static and dynamic loads
- User defined waveform (UDW)
- CZ mode for turn on capacitive load simulation
- External loading current simulation
- Auto frequency sweep up to 50kHz
- Real time power supply load transient response simulation & Vpk+/- measurement
- User programmable 255 sequential front panel input status
- Ultra high precision voltage & current measurement
- Precision high speed digitizing measurement/data capture
- Voltage, current & Pmax measurement for OCP/OLP tesing
- Timing & discharging measurement for batteries
- Instant overpower loading
- Short circuit simulation
- Smart fan control
- Full protection: OC (adjustable), OT,
- OP (adjustable) protection & OV warning
- Standard USB, optional Ethernet and GPIB interfaces



Chroma

APPLICATIONS



Data Center



Telecom Power



Battery Pack



Server Power



High Voltage UPS



Solar Panel





On Board Charger



EV Charger Station

ULTRA HIGH POWER DENSITY & USER-DEFINED HOT KEY DESIGN

Chroma's 63200A series high power electronic loads with digital signal microprocessor (200MHz) built in have the optimal speed and control performance. The ultra high density power (6kW@4U) not only saves room, its super high voltage (0.015%+0.015%F.S.) and current (0.04%+0.04%F.S.) measurement accuracy ensures the fidelity of results. In addition, the entire series can either be operated by hand or controlled remotely. For higher power demands, master/slave control can be used to parallel multiple units for operation. These electronic loads also have synchronous loading capabilities to simulate the actual loading status.

The world leading ultra high power density design overturns the concept of oversize and difficult moving high power electronic load. It saves plenty of room space and solves the space issue when upgrading the electronic load in an automated test system. Moreover, the 63200A provides 4 sets of user-defined hot keys that enable the user to enter the operation mode quickly.

ICONIC FUNCTION SELECTIONS

The iconic function selections make it easier for users to control/operate the 63200A series. The basic and advance functions are iconized, users can select the functions via the rotary or arrow keys. The abbreviations are shown in the icons and the full descriptions are shown on the VFD display for users to easily operate without the need for an operation manual.

E: 8:0000 A SK: 8:25 minut . CS CR A 0000.0 ∨ 00000.0	DC ELECTRONIC LOAI	0 63205A-150-500	
CC_L Von = 0,0000 U CP	0.000	0.0000	

DO ELECTRONIC LOAD 63205A-150	-500
Battery Dischar9e SUD (000) SWP (CUCR (4UTO (PROS) UDW (EX	
IC ELECTRONIC LOAD 63205A-150	-500
Constant Current	

FLIPPABLE FRONT PANEL

The 63200A series is equipped with flippable front panel for 7U, 10U & 13U height models with maximum flippable angles 70°. This design allows convenient access to controls from any height.






63224A-150-2000


APPLICATION OF BASIC LOADS

The 63200A series electronic loads operate in constant voltage, current, resistance, or power modes to satisfy a wide range of test requirements. For instance, the CC and CR modes ensure that the UUT voltage outputs remain stable when the load varies. For battery chargers or charging stations, CV mode can change their output voltage to ensure the precision of the charging current. When the UUT is a battery, the electronic load changes to simulate device loading behavior. Many battery discharge applications and power consumption profiles can be simulated for analysis, making the CP mode the best choice for simulating electronic device loads.



MASTER/SLAVE PARALLEL CONTROL

When the need is for increased power, two or more loads can be run in parallel to achieve the desired load current. The 63200A provides the user with smart Master/ Slave mode controls which enables the user to program the load currents of the Master and have them automatically calculated and downloaded to the slave loads. Using several loads in parallel to emulate a single load dramatically simplifies the operation. All models of the series can be integrated into a 41U standard rack to save space. The 63200A can be controlled and reconfigured with automated testing applications via standard USB or optional Ethernet and GPIB interfaces.

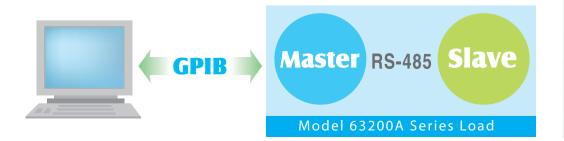




SINE WAVE DYNAMIC LOAD

The 63200A series has a unique sine wave loading function which allows setting of a current bias (I_DC), a loading sine wave (I_AC) and sine wave frequency. The sine wave loading must be greater or equal to zero ampere. This function can be used for D/D, server power supplies and fuel cells for D/CIR testing.






DYNAMIC LOAD



1. Dynamic + Repeat Times 2. Frequency Sweep

Modern electronic devices operate at very high speeds and demand rapid transient response characteristics. To address these applications, the 63200A series offers high speed, programmable dynamic loading (CCD: Dynamic Current Loading & CRD: Dynamic Resistance Loading) and sweep simulation for testing. The figure shown below exhibits the programmable parameters such as current high/low level, T1/T2, rise/fall rate and execution times. When the load current changes continuously, the internal monitoring mechanism and line circuit can minimize the current waveform distortion. The current rise minimum response time for model150V is 10µs and the dynamic change is up to 50kHz.

The dynamic mode provides a unique simulation capability allowing users to set the number of times each cycle repeats from 1~65535. This feature is very suitable for testing D/D converter and instant large withstand current of batteries.

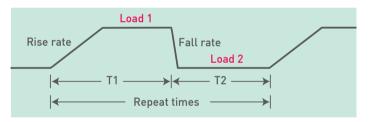

DYNAMIC FREQUENCY SWEEP CONTROL


The 63200A also offers a unique dynamic frequency sweep (as shown on the right) with variable frequencies up to 50kHz. This capability is ideal for determining worst case voltage peaks. Measurement of the Vpeak (+/-) can be achieved using this function with a sampling rate of 500kHz. The dynamic loading mode can simulate different loading conditions for most test requirements. Dedicated remote load sensors and control circuits guarantee minimum waveform distortion during dynamic loading.


toon I at	HICE &								
		Len.							
_				(united)					
****						+++++	+++++	****	
пп	nn	пп	1111		A HILL			100	17
9.61	101				100.00				1.5

CONSTANT IMPEDANCE MODE (CZ MODE)

There are many capacitors on the mainboard of PC. To prevent the inrush current from occurring and trigger the over current protection of server power (since the server power charges the capacitors on the mainboard). It is necessary to test the capacitive loading when turning on the power supply. Therefore, the 63200A series provides the CZ mode for this test.

The unique CZ mode designed in 63200A series can improve the loading behavior of CC & CP mode and makes the simulated loading current more realistic.

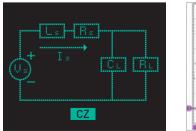

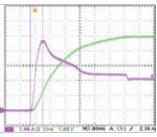


ULTRA HIGH PRECISION MEASUREMENT

The 63200A series provides three operating and measuring ranges. Take 63206A-150-600 for example, three voltage ranges of 16V/80V/150V which can meet the requirements of server power or telecom power (12V, 48V, 54V) testing; three current ranges of 60A/300A/600A which can provide different applications of current operating and can minimize the measurement error by selecting the suitable range. Besides, a built-in highly precision A/D converter, achieving 0.015%+0.015%F.S., 0.04%+0.04%F.S. and 0.1%+0.1%F.S. accuracy for voltage, current and power measurement espectively. Precise measurements like these are ideal for testing power efficiency and other critical parameters of the UUT's.

OVER CURRENT & OVER POWER TESTING

To ensure user safety and minimize power supply failure rates, overcurrent and overpower protections have to be taken into consideration during design. The 63200A enables the user to set current and power orders to test overcurrent and overpower protections, also to judge the test result as Pass or Fail on electronic load. The maximum power (Pmax) during testing can be captured and showed on the display without using an oscilloscope to verify the correctness of designed overcurrent and overpower. It can save a lot of testing time for the user.

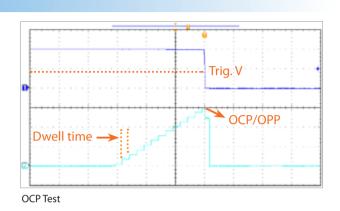

USER DEFINED WAVEFORMS

In addition to common CC, CV, CP and CR loading modes of conventional loads, the 63200A accepts digital data from DAQ cards or analog data from function generators to allow for complex waveforms to be created as depicted below.




The 63200A also provides an enhanced feature, User Defined Waveform (UDW), to simulate the actual current profiles and waveforms. To reconstruct the actual current waveform, the user can upload captured waveform data into any load via a Chroma softpanel. Each load is capable of storing up to 10 sets of waveforms with each comprising up to 1.5 millions data points to meet the more strenuous test requirements.

In addition, 63200A series also provides voltage peak measurement during actual loading conditions. Avoiding the need for using an oscilloscope to capture the voltage peak, saving time and costs.



BATTERY DISCHARGE TESTING

The 63200A has three discharge modes: CC, CR and CP. The electronic load can set cut off voltage and time (1~100,000 sec.) to stop loading correctly and make sure the battery is not damaged due to over discharge. In addition it can measure the battery discharge power (WH, AH) and total discharge time. For example, when Load ON is pressed, the 63200A internal clock will start counting until the battery voltage is dropped to cut off voltage or Load OFF is pressed. The battery discharge testing can also apply to super capacitor for discharge time testing and so on.

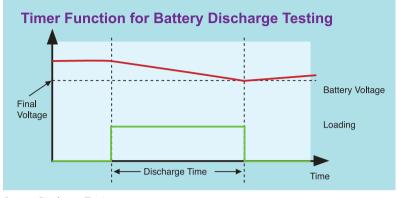


Battery Discharge Testing

PROGRAMMABLE LOAD TIMING


The 63200A series electronic load has built in 255 programmable timings for various loading conditions simulation. Following lists the applications of common programmed timings.

- 1. Battery discharge & other applications (NPC, electric car and electric locomotive) to simulate various dynamic loading current waveform, that is to provide two levels above dynamic current simulation or one shot loading simulation.
- 2. Server/Telecom power supply mixed load modulation. (For multi channels output UUT.)

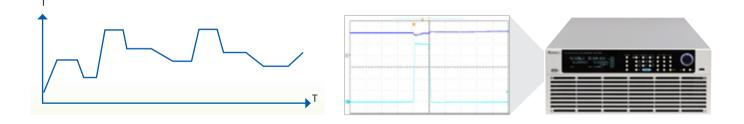


DIGITIZING FUNCTION

The 63200A series offers a digitizing function convenient for the recording of transients in both voltage and current waveforms. The following are the specifications for setting the parameters:

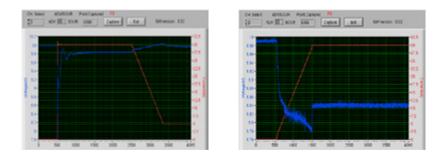


COMPLEX OPERATING MODE

New complex operating modes include CR+CC, CV+CR and CV+CC modes. The CR+CC mode is suitable for power on testing and the CV+CR mode can replace Von setting while the CV+CC mode can be used for battery discharge testing.

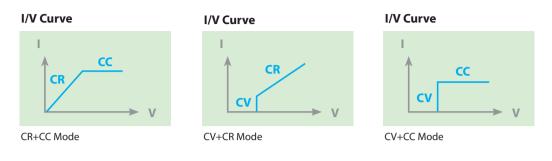


AUTO MODE

This mode automatically switches among CV, CR, CC and CP modes. It is suitable for lithium ion battery charger testing to get a complete V-I charging curve. Moreover, the auto mode can avoid damaging the UUT when the protection circuit is damaged.

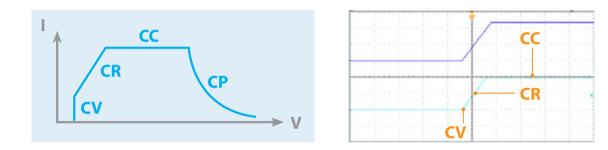


SOFTPANEL

The 63200A series loads can be operated from the front panel controls or from available softpanel. This user friendly software includes all functions of the 63200A series loads and is easy to understand and operate. The 63200A loads can be controlled via GPIB, USB and Ethernet interfaces for remote control and automated testing applications.

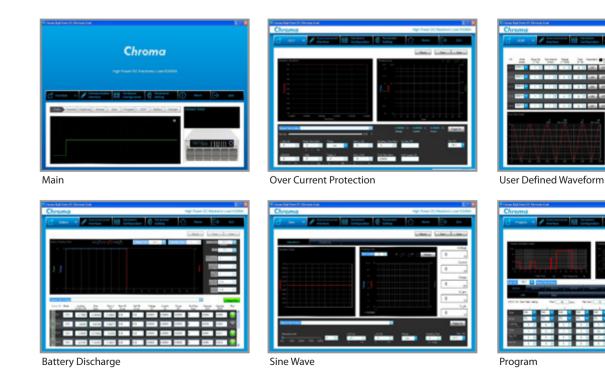

	DESCRIPTION			
	• •	3 4	5	6 7
(2* 10.0000 a SR* 0.25 mix/vs CE Ø.0000 ∨ Ø.0000 ∧ CE 0.0000 ∨ Ø.0000 ∨ CC_L Von = 0.0000 ∨	(1) 00 ELECTRONIC LOAD 63205A-150-500	NOTREY PUNCEION	ENTRY	
	0.0000.0 V0000.0	• • • • • • • • • • • • • • • • • • •		\bigcirc

- 1. Power Switch : Electronic load AC power switch
- 2. Vacuum Fluorescent Display : Setup information display
- 3. Shortcut Keys : Loading mode switch
- 4. Function Keys : Including A/B key, RANGE, MODE, EXTEND, LOCK, COFIG./LOCAL, EDIT, SPEC, SHORT, RECALL, ADVA, SAVE & CLEAR
- 5. ENTRY Keys : Numerical keys and ENTER key
- 6. Arrow Keys : Changing and selecting menu
- 7. Push-on Knob : Editing parameter setup page, push the knob again to confirm the input value when the setting is done
- 8. USB Host (not ready yet) : For user defined waveform and programmed sequence data download as well as firmware upgrade

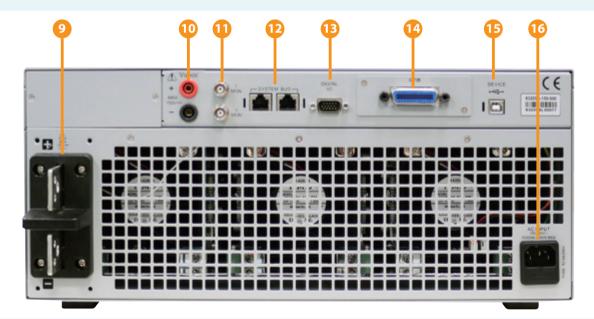

9. Load Positive/Negative Terminal

- 10. Remote Sense Connections
- 11. Analog Outputs : Proportional voltage and current waveforms
- 12. System BUS : For master/slave system data transmission
- 13. System I/O : For system input/output signal control
- 14. GPIB & Ethernet Card Slot
- 15. USB Port
- 16. AC Input Connector

SPECIFICATION-1

Model	63204A-150-400			63	205A-150-	500	63	206A-150-	600	63224A-150-2000			
Voltage*2		0~150V		0~150V				0~150V		0~150V			
Current		0~400A			0~500A			0~600A		0~2,000A			
Power*3		0~4,000W			0~5,000W			0~6,000W		0~24,000W			
Static mode		0 4,000			0 5,00011		<u> </u>	0 0,00011					
Static mode													
Min. voltage @ full current	0.18V @40A	0.9V @200A	1.8V @400A	0.15 @50A	0.75V @250A	1.5V @500A	0.18V @60A	0.9V @300A	1.8V @600A	0.18V @200A	0.9V @1,000A	1.8V @2,000A	
Constant current mode													
Range	40A	200A	400A	50A	250A	500A	60A	300A	600A	200A	1,000A	2,000A	
Accuracy*4	0.0	5%+0.05%	F.S.	0.0)5%+0.05%	F.S.	0.0)5%+0.05%	F.S.	0.0)5%+0.05%	F.S.	
Constant resistance mode													
Range	0.03	75Ω~75Ω Ω~300Ω(2~1,500Ω(80V)	0.02	0.005 Ω ~50 Ω (16V) 0.02 Ω ~200 Ω (80V) 0.5 Ω ~1,000 Ω (150V)			5Ω~50Ω(Ω~200Ω(~1,000Ω(80V)	0.00	0.0013 Ω ~12.5 Ω (16V) 0.005 Ω ~50 Ω (80V) 0.125 Ω ~250 Ω (150V)		
Accuracy	Vin/Rse	et*(0.2%)+0	.2% IF.S.	Vin/Rse	et*(0.2%)+0	.2% IF.S.	Vin/Rse	et*(0.2%)+0	.2% IF.S.	Vin/Rse	et*(0.2%)+0	.2% IF.S.	
Constant voltage mode													
Range	16V	80V	150V	16V 80V 150V		16V	80V	150V	16V 80V 150V		150V		
Accuracy	0.02	25%+0.025%	%F.S.	0.02	25%+0.025%	%F.S.	0.02	25%+0.025	%F.S.	0.02	25%+0.025%	%F.S.	
Constant power mode													
Range	400W 2,000W 4,000W		500W	2,500W	5,000W	600W	3,000W	6.000W	2,400W	12.000W	24,000W		
Accuracy *5	0.2%+0.2%F.S.		500W 2,500W 5,000W 0.2%+0.2%F.S.				.2%+0.2%F	-,	· ·	.2%+0.2%F	,		
Constant impedance mode	0.270101270101			0	.2 /01 0.2 /01			.2 /01 0.2 /01		0.27010.2701.5.			
Range													
CC+CV				C ₁ : 30μF-50,000μF ; R ₁ : as CR ; Ls: 0.1μH-16μH ; Rs: 30m Ω -20 Ω Refer to CC & CV specifications									
CR+CV				Refer to CR & CV specifications									
CR+CV													
	Refer to CR & CC specifications												
Dynamic mode	0.0	20.00.000		0.0	20.00.000		0.0	20.00.000		0.0	20.00.000		
T1 & T2	0.020~99.999ms/ 100ms~99,999ms			0.020~99.999ms/ 100ms~99,999ms			0.020~99.999ms/ 100ms~99,999ms				20~99.9991 0ms~99,999		
Accuracy		µs+100ppr			µs+100ppr			μs+100ppi			µs+100ppr		
Slew rate	2n	5mA/μs~4A nA/μs~14A, nA/μs~28A,	/μs	0.5mA/µs~5A/µs 2mA/µs~17.5A/µs 5mA/µs~35A/µs			0.5mA/µs~6A/µs 2mA/µs~21A/µs 5mA/µs~42A/µs			2mA/µs~20A/µs 10mA/µs~40A/µs 20mA/µs~80A/µs		õs	
Accuracy		5% ± 10µs	5	5% ± 10μs			$5\% \pm 10\mu s$				$5\% \pm 10\mu s$	5	
Min. rise time *6	1	0μs (Typica	l)	10µs (Typical)			1	0µs (Typica	ıl)	1	0μs (Typica	ıl)	
Measurement													
Voltage read back													
Range	16V	80V	150V	16V 80V 150V			16V	80V	150V	16V	80V	150V	
Accuracy	0.01	5%+0.015%	%F.S.	0.015%+0.015%F.S.			0.01	5%+0.0159	%F.S.	0.01	5%+0.015%	%F.S.	
Current read back													
Range	40A	200A	400A	50A	250A	500A	60A	300A	600A	200A	1,000A	2,000A	
Accuracy	0.0	4%+0.04%	F.S.	0.0	4%+0.04%	F.S.	0.0	04%+0.04%	F.S.	0.0	04%+0.04%	F.S.	
Power read back													
Range		0~4,000W		0~5,000W				0~6,000W		0~24,000W			
Accuracy *5	0	.1%+0.1%F		0.1%+0.1%F.S.			0	.1%+0.1%F		0.1%+0.1%F.S.			
Protection													
Over Current	Y	es (Settable	2)	Y	es (Settable	2))	es (Settabl	e)	Y	es (Settable	e)	
Over Power		es (Settable	-	Yes (Settable) Yes (Settable)			Yes (Settable)				es (Settable	-	
Over Temperature		Yes			Yes			Yes			Yes		
Over Voltage Alarm		Yes			Yes			Yes			Yes		
Reverse Alarm		Yes			Yes			Yes			Yes		
General		105			105		<u> </u>	105		I	105		
Input Resistance (Load Off)	80)0kΩ(Typic	-al)	80	00kΩ(Typic		80	$O(k \cap (Typic))$	(le:				
Dimension (HxWxD)	175 >	428 x 647 16.85 x 25.4	mm /	175 >	428 x 647 16.85 x 25.4	mm /	800k Ω (Typical) 175 x 428 x 647 mm / 6.97 x 16.85 x 25.47 inch			800k Ω (Typical) 574.6 x 428 x 670.5 mm / 22.62 x 16.85 x 26.40 inch			
Weight		5kg / 77.2lk			5kg / 77.2lk			5kg / 77.2ll			0kg / 286.6		
Operating Temp	3	0~40°C		3	о~40°С		3	0~40°C		13	0~40°C	105	
Line Voltage	100 3	40 VAC / 47	63∐-z	100 3	40 VAC / 47	a,63∐-	100 3	40 VAC / 47	63⊔-	100.0	40 VAC / 47	63∐	
3													
Power Consumption		200VA(max)		200VA(max)		200VA(max)		800VA(max)	
EMC & Safety		CE			CE			CE		CE			

SPECIFICATION-2

Model	63204A-600-280			63205A-600-350			632	206A-600-	420	63224A-600-1680			
Voltage*2		0~600V			0~600V			0~600V		0~600V			
Current		0~280A			0~350A			0~420A			0~1,680A		
Power*3		0~4,000W			0~5,000W	,		0~6,000W		0~24,000W			
		0.94,00010								0~24,000₩			
Static mode	4 4) (-1 (-1 (4 1) (1.01	
Min. voltage @ full current	1.4V @28A	7V @140A	14V @280A	1.4V @35A	7V @175A	14V @350A	1.4V @42A	7V @210A	14V @420A	1.4V @168A	7V @840A	14V @1,680A	
Constant current mode													
Range	28A	140A	280A	35A	175A	350A	42A	210A	420A	168A	840A	1,680A	
Accuracy*4	0.0)5%+0.05%	F.S.	0.0) 5%+0.05%	F.S.	0.0	5%+0.05%	F.S.	0.0)5%+0.05%	F.S.	
Constant resistance mod	e												
Range	0.075 0.3 Ω	5Ω~750Ω ~3,000Ω(~6,000Ω(6	150V)	0.05 Ω ~500 Ω (80V) 0.2 Ω ~2,000 Ω (150V) 2 Ω ~4,000 Ω (600V)			0.05 Ω ~500 Ω (80V) 0.2 Ω ~2,000 Ω (150V) 2 Ω ~4,000 Ω (600V)			0.013 Ω ~125 Ω (80V) 0.05 Ω ~500 Ω (150V) 0.5 Ω ~1,000 Ω (600V)			
Accuracy	Vin/Rse	et*(0.2%)+0	.2% IF.S.	Vin/Rse	Vin/Rset*(0.2%)+0.2% IF.S.			t*(0.2%)+0	.2% IF.S.	Vin/Rset*(0.2%)+0.2% IF.S.			
Constant voltage mode				VIII/IISEC (0.270)+0.270 IF.S.						1	. ,		
Range	80V	150V	600V	80V	150V	600V	80V	150V	600V	80V	150V	600V	
-													
Accuracy	0.02	25%+0.0259	/or.5.	0.02	25%+0.0259	/0 г. э.	0.02	5%+0.025	/0 г. э.	0.02	25%+0.025	/0 Г.Э.	
Constant power mode									1				
Range	400W	2,000W	4,000W	500W	2,500W	5,000W	600W	3,000W	6,000W	2,400W 12,000W 24,000		24,000W	
Accuracy *5	0	.2%+0.2%F	.S.	0	.2%+0.2%F	.S.	0	.2%+0.2%F	.S.	0	.2%+0.2%F	.S.	
Constant impedance mo	de												
Range				C ₁ : 30µF	-50,000µF ;	R ₁ : as CR ; L	s: 0.1µH-16	μH ; Rs: 30ι	nΩ -20 Ω				
CC+CV						. ,	· ·						
CR+CV				Refer to CC & CV specifications Refer to CR & CV specifications									
CR+CC													
		Refer to CR & CC specifications											
Dynamic mode				1						1			
T1 & T2	0.020~99.999ms/ 100ms~99,999ms			0.020~99.999ms/ 100ms~99,999ms			0.020~99.999ms/ 100ms~99,999ms				20~99.999 0ms~99,99		
Accuracy	1	l µs+100ppr	n	1µs+100ppm			1µs+100ppm			1	µs+100pp	m	
Slew rate	0.4mA/µs~1.2A/µs 2mA/µs~6A/µs 4mA/µs~12A/µs			0.4mA/μs~1.5A/μs 2mA/μs~7.5A/μs 4mA/μs~15A/μs			0.4mA/µs~1.8A/µs 2mA/µs~9A/µs 4mA/µs~18A/µs			2mA/µs~3.6A/µs 10mA/µs~18A/µs 20mA/µs~36A/µs			
Accuracy		5% ± 10µs	5	5% ± 10µs			5% ± 10μs				$5\% \pm 10\mu$	S	
Min. rise time *6	2	20µs (Typica	l)	20µs (Typical)			20µs (Typical)			20µs (Typical)			
Measurement		1		20µ3 (Typicul)			1	1					
Voltage read back													
	80V	150V	600V	80V	150V	600V	80V	150V	600V	80V	150V	600V	
Range													
Accuracy	0.01	5%+0.015%	% г. э.	0.0	15%+0.0159	%F.S.	0.01	5%+0.015	%F.S.	0.0	5%+0.015	% г. э.	
Current read back		1		1	1	1			1	1	1	1	
Range	28A	140A	280A	35A	075A	350A	42A			· · · · ·		1,680A	
Accuracy	0.0	04%+0.04%	F.S.	0.04%+0.04%F.S.			0.04%+0.05%F.S.			0.04%+0.04%F.S.			
Power read back				· · · · · · · · · · · · · · · · · · ·									
Range		0~4,000W		0~5,000W			0~6,000W			0~24,000W			
Accuracy *5	0	.1%+0.1%F	.S.	0.1%+0.1%F.S.			0.1%+0.1%F.S.			0.1%+0.1%F.S.			
Protection													
Over Current	\ \	es (Settable		Yes (Settable)			Yes (Settable)			Yes (Settable)			
						,							
Over Power	Y	es (Settable	=)		les (Settable	e)	Yes (Settable)			Yes (Settable)			
Over Temperature		Yes			Yes			Yes			Yes		
Over Voltage Alarm		Yes			Yes			Yes			Yes		
Reverse Alarm		Yes			Yes			Yes			Yes		
General													
Input Resistance (Load Off)	1	MΩ(Typica	al)	1	MΩ(Typica	al)	1MΩ(Typical)			1MΩ (Typical)			
Dimension (HxWxD)		x 428 x 647 16.85 x 25.4			x 428 x 647 16.85 x 25.4			175 x 428 x 647 mm / 6.97 x 16.85 x 25.47 inch			x 428 x 670 x 16.85 x 26		
Weight		5kg / 77.2lk			5kg / 77.2ll			5kg / 77.2l			0kg / 286.6		
Operating Temp		0~40°C			0~40°C		5	0~40°C		13	0~40°C		
	100 0			100.0			100.0			100.0			
Line Voltage		40 VAC / 47			240 VAC / 47			40 VAC / 47			40 VAC / 47		
Power Consumption		200VA(max)		200VA(max	()		200VA(max	()		800VA(max	()	
EMC & Safety		CE			CE			CE			CE		


SPECIFICATION-3

Model	63204A-1200-160			63205A-1200-200			632	06A-1200	-240	63224A-1200-960				
Voltage*2	0~1,200V			0~1,200V				0~1,200V		0~1,200V				
Current	0~160A			0~200A				0~240A		0~960A				
Power*3		0~4,000W			0~5,000W			0~6,000W		0~24,000W				
Static mode				1	,		1							
Min. voltage	2V	10V	20V	2V	10V	20V	2V	10V	20V	2V	10V	20V		
@ full current	@16A	@80A	@160A	@20A	@100A	@200A	@24A	@120A	@240A	@96A	@480A	@960A		
Constant current mode					1									
Range	16A	80A	160A	20A	100A	200A	24A 120A 240A			96A	480A	960A		
Accuracy*4	0.0	4%+0.06%	F.S.	0.0	4%+0.06%	F.S.	0.0	4%+0.06%	F.S.	0.0	04%+0.06%	F.S.		
Constant resistance mode														
Range	0.6	Ω~1.5kΩ(Ω~6kΩ(60 ~30kΩ(12	(V00	0.1 Ω~1kΩ (150V) 0.4 Ω~4kΩ (600V) 10 Ω~20kΩ (1200V)			0.4	Ω~1kΩ (1) Ω~4kΩ (60 ~20kΩ (12	(V0C	0.025 Ω -0.25k Ω (150V) 0.1 Ω -1k Ω (600V) 2.5 Ω -5k Ω (1200V)				
Accuracy	Vin/Rse	t*(0.2%)+0	.2% IF.S.	Vin/Rse	Vin/Rset*(0.2%)+0.2% IF.S.			et*(0.2%)+0	.2% IF.S.	Vin/Rse	et*(0.2%)+0	.2% IF.S.		
Constant voltage mode														
Range	150V	600V	1,200V	150V	600V	1,200V	150V	600V	1,200V	150V	600V	1,200V		
Accuracy	0.02	5%+0.0259	6F.S.	0.02	0.025%+0.025%F.S.		0.02	25%+0.025	%F.S.	0.02	25%+0.025%	%F.S.		
Constant power mode	<u> </u>													
Range	400W	2,000W	4,000W	500W	2,500W	5,000W	600W	3,000W	6,000W	2,400W	12,000W	24,000W		
Accuracy *5		2,000W			2,30000 .2%+0.2%F.	,		3,00000 .2%+0.2%F			.2%+0.2%F	,		
	0.	2 /0 / 0.2 /0F		0	.2 /0 / U.Z /0F.		0	-2 /01 0-2 /0F		0	•2 /01 0•2 /0F			
Constant impedance mode				C . 2015	F0 000F	Diac Chil	0.0 1.11 1.7		$n \cap 20 \cap$					
Range				C _L :30μF	C _L : 30μF-50,000μF ; R _L : as CR ; Ls: 0.1μH-16μH ; Rs: 30m Ω-20 Ω									
CC+CV				Refer to CC & CV specifications										
CR+CV				Refer to CR & CV specifications										
CR+CC					Refe	er to CR & C	C specificat	ions						
Dynamic mode				1			1							
T1 & T2	0.020~99.999ms/ 100ms~99,999ms			0.020~99.999ms/ 100ms~99,999ms			0.020~99.999ms/ 100ms~99,999ms			0.020~99.999ms/ 100ms~99,999ms				
Accuracy	1µs+100ppm			1µs+100ppm			1µs+100ppm			1	µs+100ppr	n		
Slew rate	0.2mA/μs~0.8A/μs 1mA/μs~4A/μs 2mA/μs~8A/μs			0.2mA/µs~1.A/µs 1mA/µs~5A/µs 2mA/µs~10A/µs			0.2mA/µs~1.2A/µs 1mA/µs~6A/µs 2mA/µs~12A/µs			1mA/µs~2.4A/µs 5mA/µs~12A/µs 10mA/µs~24A/µs				
Accuracy	1	5% ± 10µs	;	5% ± 10µs			5% ± 10μs				$5\% \pm 10\mu$ s	5		
Min. rise time *6	2	0μs (Typica	l)	20µs (Typical)			20µs (Typical)			20µs (Typical)				
Measurement														
Voltage read back														
Range	150V	600V	1,200V	150V	600V	1,200V	150V	600V	1,200V	150V	600V	1,200V		
Accuracy	0.01	5%+0.0159	6F.S.	0.015%+0.015%F.S.		0.01	5%+0.015	, %F.S.	0.01	5%+0.015%	%F.S.			
Current read back														
Range	16A	80A	160A	20A 100A 200A			24A	120A	240A	96A 480A 960A				
Accuracy		4%+0.06%		0.04%+0.06%F.S.				4%+0.06%)4%+0.06%			
Power read back	0.0	.,												
Range		0~4,000W		0~5 000W/			0~6,000W			0~24,000W				
Accuracy *5	0	1%+0.1%F	c	0~5,000W 0.1%+0.1%F.S.			0.1%+0.1%F.S.			0.1%+0.1%F.S.				
	0.	170 +0. 170F	5.	0	.170+0.170F.	5.	0	.170+0.170F	.3.	0	.170+0.170			
Protection					(a.a. (C ++ - 1 - 1	.)		(a.a. (C			(a.a. (C			
0	Yes (Settable)		Yes (Settable)			Yes (Settable)			Yes (Settable)					
Over Current						-		((C ··· ··	Yes (Settable)			21		
Over Power		es (Settable			es (Settable	-	Y		e)	Y	es (Settable	=)		
Over Power Over Temperature		es (Settable Yes			es (Settable) Yes	-	Y	Yes	e)	Ŷ	Yes	=)		
Over Power		es (Settable			es (Settable	-	<u> </u>		e)	Y		=)		
Over Power Over Temperature		es (Settable Yes			es (Settable) Yes	-	Y	Yes	e)	Y	Yes	=)		
Over Power Over Temperature Over Voltage Alarm		és (Settable Yes Yes			'es (Settable Yes Yes	-	Y	Yes Yes	e)	Y	Yes Yes	=) 		
Over Power Over Temperature Over Voltage Alarm Reverse Alarm	Yı	és (Settable Yes Yes	2)	Y	'es (Settable Yes Yes	2)		Yes Yes			Yes Yes			
Over Power Over Temperature Over Voltage Alarm Reverse Alarm General	21 175 x	es (Settable Yes Yes Yes	2)) mm /	۲ 2 175 ک	Yes (Settable Yes Yes Yes	e))) mm /	2 175 x	Yes Yes Yes	al) mm /	2 175 >	Yes Yes Yes	al) mm /		
Over Power Over Temperature Over Voltage Alarm Reverse Alarm General Input Resistance (Load Off) Dimension (HxWxD)	21 175 x 6.97 x	es (Settable Yes Yes Yes ΜΩ (Typica 428 x 647 16.85 x 25.4	e) I) mm / I7 inch	2 175 x 6.97 x	'es (Settable Yes Yes Yes ΜΩ (Typica < 428 x 647 16.85 x 25.4	l) mm / I7 inch	2 175 x 6.97 x	Yes Yes Yes ΜΩ (Typica (428 x 647 16.85 x 25.	al) mm / 47 inch	2 175 x 6.97 x	Yes Yes Yes M Ω (Typica < 428 x 647 16.85 x 25.4	al) mm / 47 inch		
Over Power Over Temperature Over Voltage Alarm Reverse Alarm General Input Resistance (Load Off) Dimension (HxWxD) Weight	21 175 x 6.97 x	es (Settable Yes Yes MΩ (Typica 428 x 647 16.85 x 25.4 5kg / 77.2lk	e) I) mm / I7 inch	2 175 x 6.97 x	Yes Yes Yes MΩ (Typica (428 x 647 16.85 x 25.4 5kg / 77.2lk	l) mm / I7 inch	2 175 x 6.97 x	Yes Yes Yes M Ω (Typica (428 x 647 16.85 x 25. 5kg / 77.2ll	al) mm / 47 inch	2 175 x 6.97 x	Yes Yes Yes M Ω (Typica < 428 x 647 16.85 x 25 0kg / 286.6	al) mm / 47 inch		
Over Power Over Temperature Over Voltage Alarm Reverse Alarm General Input Resistance (Load Off) Dimension (HxWxD) Weight Operating Temp	21 175 x 6.97 x 3	es (Settable Yes Yes Yes M Ω (Typica 428 x 647 16.85 x 25.4 5kg / 77.2lt 0~40°C	a) II) mm / I7 inch Ds	2 175 5 6.97 x 3	Yes Yes Yes MΩ(Typica < 428 x 647 16.85 x 25.4 5kg / 77.2lk 0~40°C	i) I) mm / I7 inch I55	2 175 x 6.97 x 3	Yes Yes Yes MΩ(Typicc (428 x 647 16.85 x 25. 5kg / 77.2ll 0~40°C	al) mm / 47 inch os	2 175 x 6.97 x 13	Yes Yes Yes M Ω (Typica < 428 x 647 16.85 x 25.4 0kg / 286.6 0~40°C	al) mm / 47 inch Ibs		
Over Power Over Temperature Over Voltage Alarm Reverse Alarm General Input Resistance (Load Off) Dimension (HxWxD) Weight	21 175 x 6.97 x 32 100~2-	es (Settable Yes Yes MΩ (Typica 428 x 647 16.85 x 25.4 5kg / 77.2lk	e) II) mm / I7 inch Ds ~63Hz	2 175 5 6.97 x 100~2	Yes Yes Yes MΩ (Typica (428 x 647 16.85 x 25.4 5kg / 77.2lk	l) mm / H7 inch vs ~63Hz	2 175 x 6.97 x 3 100~2	Yes Yes Yes M Ω (Typica (428 x 647 16.85 x 25. 5kg / 77.2ll	al) mm / 47 inch 55 7~63Hz	2 175 > 6.97 x 13 100~2	Yes Yes Yes M Ω (Typica < 428 x 647 16.85 x 25 0kg / 286.6	al) mm / 47 inch Ibs 7~63Hz		

* All specifications are subject to change without notice.

NOTES OF SPECIFICATIONS

- 1. The specifications are guaranteed to meet specified performance at temperature range of $25\pm5^{\circ}$ C.
- 2. If the operating voltage exceeds the rated voltage for 1.05 times, it would cause permanent damage to the device.
- 3. The power rating specifications at ambient temperature = 25° C.
- 4. If the operating current is below range 0.2%, the accuracy specification is 0.1% F.S.
- 5. Power F.S. = Vrange F.S.x Irang F.S.
- 6. The specification is valid only for loading current > 4% F.S.
- 7. The short circuit function simulates full power loading and thus it cannot perform mechanical short circuit.

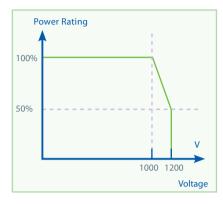

ORDERING INFORMATION

63204A-150-400: High Power DC Electronic Load 150V / 400A/ 4kW 63205A-150-500 : High Power DC Electronic Load 150V / 500A / 5kW 63206A-150-600: High Power DC Electronic Load 150V / 600A / 6kW 63224A-150-2000 : High Power DC Electronic Load 150V / 2000A / 24kW 63204A-600-280: High Power DC Electronic Load 600V / 280A / 4kW 63205A-600-350: High Power DC Electronic Load 600V / 350A / 5kW 63206A-600-420 : High Power DC Electronic Load 600V / 420A / 6kW 63224A-600-1680 : High Power DC Electronic Load 600V / 1680A / 24kW 63204A-1200-160: High Power DC Electronic Load 1,200V / 160A / 4kW 63205A-1200-200: High Power DC Electronic Load 1,200V / 200A / 5kW 63206A-1200-240: High Power DC Electronic Load 1,200V / 240A / 6kW 63224A-1200-960: High Power DC Electronic Load 1,200V / 960A / 24kW A600009: GPIB cable (200cm) A600010: GPIB cable (60cm) A632000 : Softpanel for 63200A Series A632006 : NI USB-6211 Bus-Powered Multifunction DAQ A636000 : GPIB interface A636010: Ethernet interface



Septiembre, 31 - 28022 Madrid Tel. 913000191 - Fax. 913885433 www.idm-instrumentos.es - idm@idm-instrumentos.es

HEADQUARTERS CHROMA ATE INC. 66 Huaya 1st Road, Guishan, Taoyuan 33383, Taiwan T +886-3-327-9999 F +886-3-327-8898 www.chromaate.com

info@chromaate.com

U.S.A. CHROMA SYSTEMS SOLUTIONS, INC. 19772 Pauling, Foothill Ranch, CA 92610 T +1-949-600-6400 F +1-949-600-6401 www.chromausa.com sales@chromausa.com

EUROPE CHROMA ATE EUROPE B.V. Morsestraat 32, 6716 AH Ede, The Netherlands T +31-318-648282 F +31-318-648288 www.chromaeu.com sales@chromaeu.com

JAPAN CHROMA JAPAN CORP.

888 Nippa-cho, Kouhoku-ku, Yokohama-shi, Kanagawa, 223-0057 Japan T +81-45-542-1118 F +81-45-542-1080 www.chroma.co.jp info@chroma.co.jp

CHINA

CHROMA ELECTRONICS (SHENZHEN) CO., LTD. 8F, No.4, Nanyou Tian An Industrial Estate, Shenzhen, China PC: 518052 T +86-755-2664-4598 F +86-755-2641-9620 www.chroma.com.cn info@chromaate.com

SOUTHEAST ASIA QUANTEL PTE LTD.

(A Company of Chroma Group) 46 Lorong 17 Geylang # 05-02 Enterprise Industrial Building, Singapore 388568 T +65-6745-3200 F +65-6745-9764 www.quantel-global.com sales@sg.quantel-global.com